




Technology Made Simple





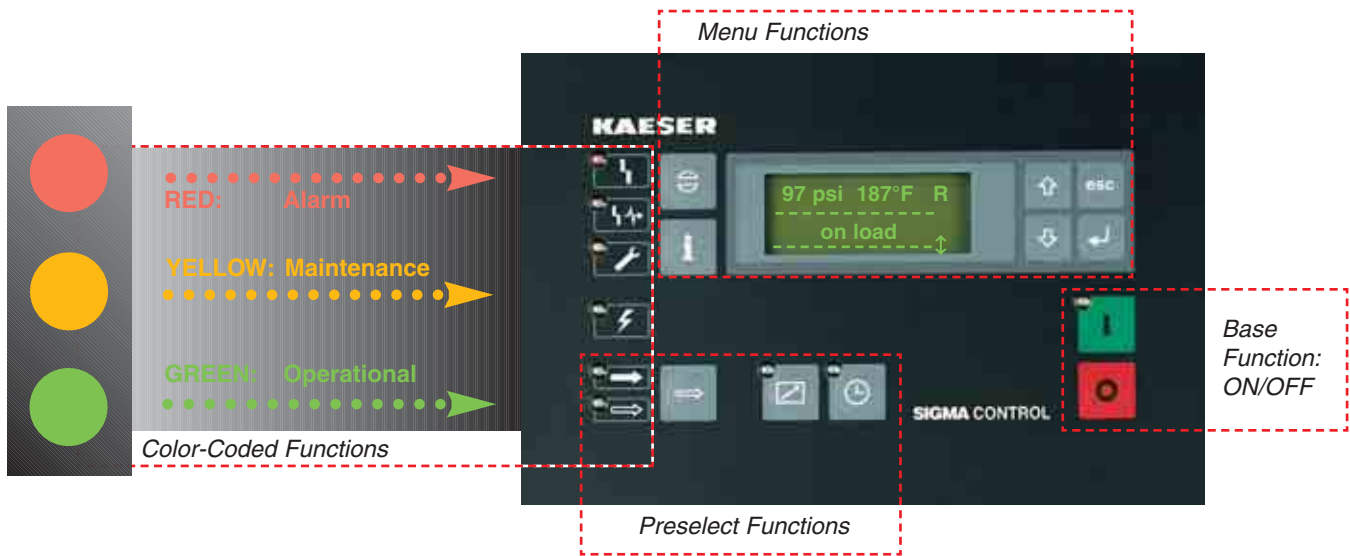


Function Keys on the Control Panel



 
 
Base Function

-  **ON Key**
Switches ON compressor in automatic self control operation. Green LED indicates 'Compressor ON'.
-  **OFF Key**
Switches the compressor OFF.


Preselect Functions

-  **Idle Key**
Switches the compressor from load to idle.
-  **Idle Icon**
Green LED indicates 'Compressor idling, no air supply'.
-  **Load Icon**
Green LED indicates 'Compressor on Load, air being supplied'.
-  **Remote ON Key**
Switches remote control ON and OFF. Green LED illuminates under external control.
-  **Timer ON/OFF Key**
Switches the timer ON and OFF. Green LED indicates 'Timer ON'.




 
 
 
Color-Coded Functions

-  **Alarm Icon**
Red LED indicates 'Malfunctioning compressor'. Compressor is shut down on alarm.
-  **Communication Alarm Icon**
Red LED indicates 'Data communication to other systems interrupted'.
-  **Maintenance Icon**
Yellow LED indicates 'Maintenance due' or 'Maintenance counter expired' or 'Warning'.
-  **Power ON Icon**
Green LED indicates 'Main switch ON, power supply available'.

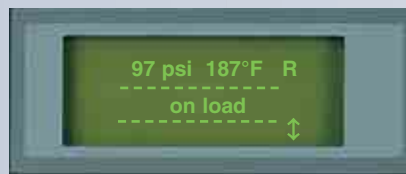Plain Text Display



Menu Functions

-  **Up Key**
Scrolls up line by line.
-  **Down Key**
Scrolls down line by line.
-  **Escape Key**
Returns to next higher level.
-  **Enter Key**
Indicates jump to next sub-menu or accepts value.
-  **Acknowledge Key**
Acknowledges alarms and, when permitted, resets the alarm memory.
-  **Info Key**
Access to additional information or to the event information memory.